




Cleaning procedure for Trelleborg food hoses

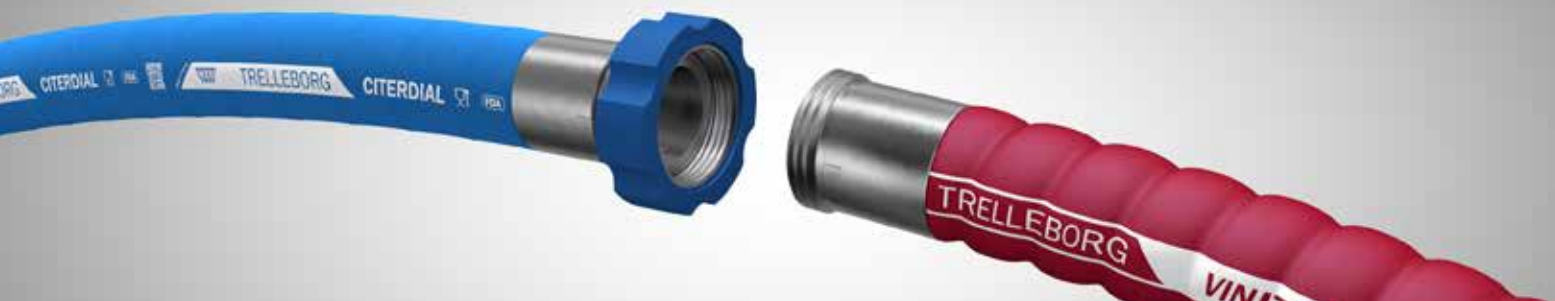

Before first use, you should proceed as follows in order to prevent any alteration of your fluid.

- Fill hose with hot water (70°C to 80°C).
- Keep water inside for minimum 2 hours.
- Then, clean hose using any of the following cleaning processes which should prevent early ageing of your hoses.

⚠ Advice for cleaning processes

- These recommendations are based on maximum of 2 cycles a day (with maximum 15 minutes in total for the chemical cleanings).
- **Every cleaning cycle must be immediately followed by a complete rinse.**
- For any other chemical or mix of chemicals, concentration, duration, temperature and frequency, please contact us to select the best hose for your application.

| TRELLEBORG | Max duration in total | CITERDIAL LACTADIAL - ALCODIAL VENDANGE - VINITRELL | SUPERVRAC AL EC TRELLVAC AL EC | ALIKLER D ALIKLER G2 - BIOVAST BIOCLEAN - KLENET | MILLESIME TRELLVIN - BERGALAV MULTIDIAL UPE FOOD 10 HOT EU |
|--|-----------------------|---|--|--|---|
| Hot water | max 30 minutes | • max 90°C | | • max 95°C | |
| Steam (open end circuit) | max 10 or 30 minutes | • max 110°C during max 10 minutes | • max 130°C during max 30 minutes | | |
| Nitric acid | max 15 minutes | • 0.1% at max 85°C • 3% at room temperature | | | |
| Phosphoric acid | | • 1% at max 85°C • 3% at room temperature | | | |
| Chlorinated products (hydrochloric acid, sodium hypochlorite...) | | • 1% at max 70°C | | | |
| Sodium hydroxide | | • 2% at max 80°C • 5% at room temp. | • 2% at max 60°C • 5% at room temperature | • 2% at max 80°C • 5% at room temp. | |
| Hydrogen peroxide | | • 3% at room temperature | | | • 1.5% at max 85°C • 3% at room temp. |
| Peracetic acid | | • 0.5% at room temp. | • 1% at room temp. | | • 1% at max 50°C |

⚠ Regular checks

It is recommended to carry out regular checks on the hose (cover and tube) to make sure it is still safe of use as its original properties will eventually alter upon usage.

⚠ Storage

Keep away from (sun) light and heat. Only use pierced plugs when needed.

⚠ Stagnation

Prohibited except with ALCODIAL or MULTIDIAL UPE, for limited duration.

⊘ Be careful

Do not use high pressure cleaning systems to wash inside the hose.